

Platform guidelines



Here are some guidelines on the use of your Donald Rotary Platform. It is essential these guidelines are followed to prevent any harm or injury to people or cows.

- While the platform is operating, you must ensure that
 - people are not on the platform
 - only people checking the operation of the platform are under the platform - these people must be aware of the milk receiving can to ensure they're not hit by it as it moves round
 - people don't put their hands or any parts of their body between the breach rail and kick rail
 - People are aware of the pinch points which can result in injury - these are the following places:
 - The entry/exit to the platform
 - Dee gate
 - At the bridge
 - Around drive unit and all wheels under the platform
- For platforms with automatic oilers - don't operate the platform if the oiler is empty
- For platforms fitted with an emergency stop red pull cord - this is for use in an emergency only and will result in the platform stopping suddenly. To restart the platform you must turn the red switch at the control panel
- All platforms must have a pressure switch to prevent injury to cows

Also refer to our sheet on 'Platform Maintenance' to ensure your platform is maintained correctly.

For any issues or questions, please get in touch with your local service agent or Donald Engineering.

Your local service agent is:

Donald Engineering Ltd
1946 Edendale Woodlands Highway
Edendale 9893

P 03 206 6310
E office@donaldengineering.co.nz
W www.donaldengineering.co.nz